

# INSTALLATION INSTRUCTIONS FOR RAINTRAP® S-LOCK

## IMPORTANT NOTE:

Before application of RAINTRAP® gutter protection begins,  
The following steps must be taken to ensure proper performance of the product.

- 1: All gutters and downspouts must have all debris removed.
- 2: All gutters must be checked for proper drainage.  
(1/2" drop per 10 feet of gutter is recommended)
- 3: All straining devices or other existing gutter guards must be removed.
- 4: All gutters must be secured properly to the structure.


### Step 1

Slide the RAINTRAP® between the  
starter strip and first row of shingles.



### Step 2

Pull the RAINTRAP® down to the  
gutter to lock the cover in place.

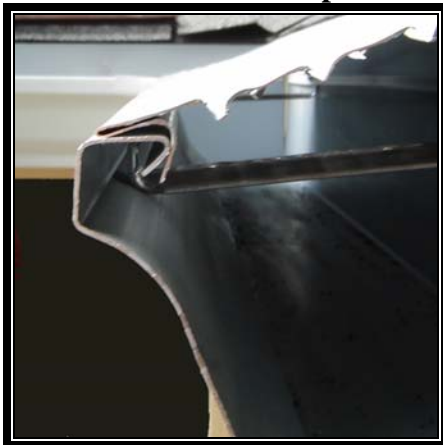

### Step 3

Continue installing RAINTRAP®  
covers, overlapping approximately 1/4  
inch. Secure with provided screws  
approximately 1 foot from each side of  
cover (Fig. B). At the end of each  
gutter, be sure to fold the end down  
into the gutter to prevent birds or  
rodents from entering the gutter. (Fig.  
A)



Figure A



Figure B

## RAINTRAP® Valley Installation

**NOTE:** The valley piece used in the following diagram is sold separately and is available in all standard colors.

### Step 1

Make 45° cuts in the RAINTRAP® cover so that when it is placed on an inside corner, it looks like the following:



### Step 2

Slide Valley piece into corner between the top layer of shingles and the starter strip.




### Step 3

Fasten down the RAINTRAP® Valley piece with two of the provided screws.



**Optional Techniques for uncommon situations; can be used for shingle, tile or metal roofs.**

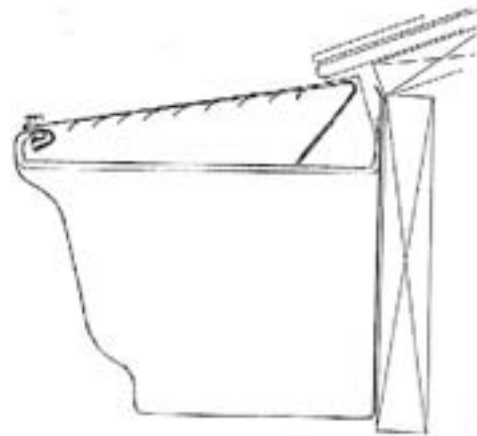

**For Flat Roofs**

